


# TOUCHSCREEN INSTRUCTIONS



## INSERT

the **Voter Card** into the yellow slot at bottom left. Push all the way in until you feel it "click." Touch the screen to select a language.

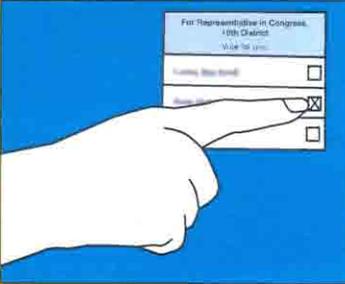


## TOUCH


the area that contains the name of the candidate of your choice. Look for an x mark to the right of the chosen candidate's name. **You may change your vote by touching the same selection again to de-select.** For write-in votes, follow the instructions on the screen.

**Continue** to the following page by touching **Next** or return to the previous page by touching **Back**.

## REVIEW & CAST BALLOT

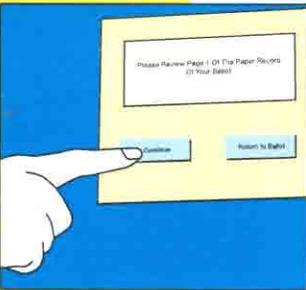

- **TOUCH** panel to **Review** a paper record of your ballot.
  - **TOUCH** **Continue** to scroll through entire ballot, or **Return to Ballot** for corrections.
- When your ballot is complete,
- **TOUCH** **Cast Ballot**, and your ballot is **Accepted**.

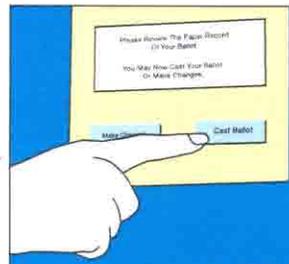

## YOUR BALLOT IS NOW CAST!

The **Voter Card** will now eject. Please return it to an Election Judge.